



Skyline Stretch Fabric Wall

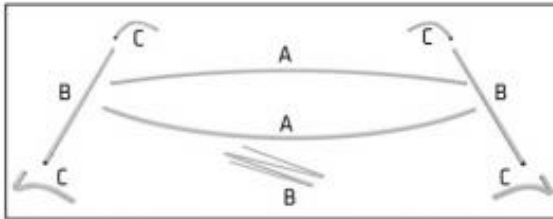


- A - 2 Curved frame sections**
- B - 2 Straight frame sections + 1 ea. center support**
- C - 4 Corner sections (Shape coded)**
- D - Fabric Graphic**




- 1** Assemble the two long curved and long straight sections (Connected with bungee cord). The frame is symmetrical. Either curved pole can be top or bottom.

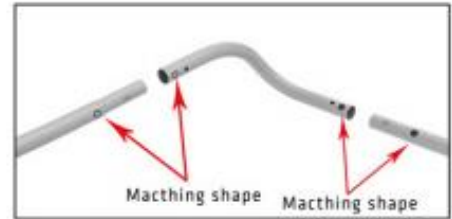


- 2** Connect corner sections to curved and straight sections with matching shape codes.

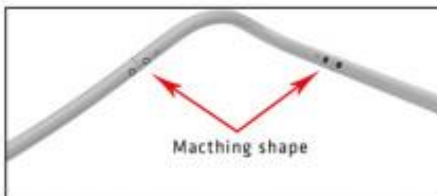

- 3** Repeat step 2 for the other 3 corners.

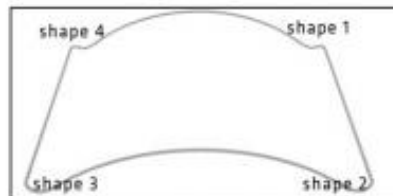

- 4** Assembled frame shown.

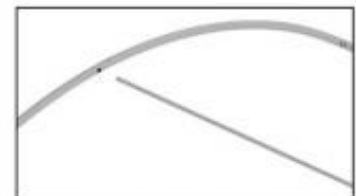

- 5** Insert center support pole.



- 6** Unzip print and lay image face down. Slide print onto frame like a pillow case.



- 7** Zip the bottom edge of graphic beyond the center point as shown above. This will hold the center support pole in place. Zip the remaining side and bottom to meet at the corner. Attach lights if used, stand the display to complete the assembly.



- 8** Position lights as desired and tighten knob to hold in place. **WARNING! OVERTIGHTENING MAY CAUSE DAMAGE TO FABRIC IMAGE.**

DISASSEMBLY: Disassemble in reverse order. To minimize wrinkles, it is highly recommended that you close the zipper prior to folding the fabric and store it in the elastic zip-lock bag for protection.

Skyline Stretch Fabric Wall Hard Case Counter



1. Put case flat on the floor and undo straps



2. Lift lid and remove the content of the case.



3. Put the lid (not the side with wheels) on the floor first. Place the supplied vertical support poles in place firmly.



4. Now lift the base and place on top of the support pole, fit the poles same as the base.



5. Place case in a clean area to fit the fabric print, like putting your pants on, start at the base, make sure zipper is in the middle.



6. Make sure that all wrinkles are out and the fabric looks straight .



6. Put the lid right on top and press to secure.



7. The zipper on the back is used to access storage.



8. Enjoy